



Norbar Torque Tools

TT Screwdriver

TTs1.5 to TTs6.0 (N·m)

TTs13 to TTs53 (lbf·in)


Adjustable Type

- Unlock
- Déverrouiller la mollette
- Entsichern
- Sbloccare
- Desbloquear

- Lock
- Verrouiller la molette
- Sichern
- Bloccare
- Bloquear





Adjustable Type

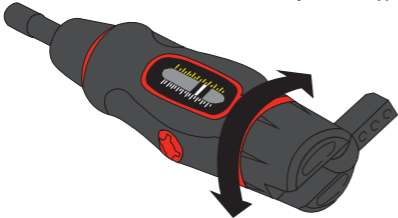

- Turn knob to adjust
- Tournez le pommeau pour régler
- Zur Einstellung des gewünschten Wertes, betätigen Sie den Drehknopf am Ende des Handgriffes
- Ruotare il pomello di regolazione
- Ajuste el par girando extremo

  Adjustable Type



Adjustable Type

- Never adjust beyond the marked scale
- Ne jamais régler en-dehors de la zone de l'échelle
- Niemals über den markierten Skalenbereich hinaus einstellen
- Mai regolare la chiave oltre il marchio sulla scala
- No ajustar por debajo de la zona marcada en la escala

P Type




x4

P Type

- Remove Seal and loosen locking screw
- Ôter la protection et desserrer la vis de blocage
- Das Siegel entfernen und die Schraube lösen
- Rimuovere la guarnizione e allentare la vite di bloccaggio
- Quite el tapón y afloje el tornillo de bloqueo




P Type

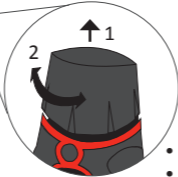

- Adjust- Operate- Check
- Ajuster- Manoeuvrer- Contrôler
- Einstellen- Bedienen- Prüfen
- Regolare- Azionare- Verificare
- Ajuste- Apriete- Verifique

P Type

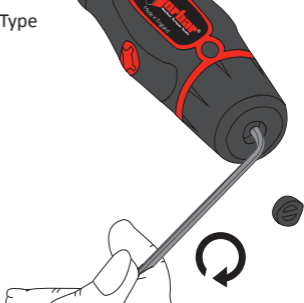



- Rotate tool until slip
- Appliquer le couple par rotation jusqu'au déclenchement
- Anziehen mit dem Drehmomentschrauber, bis dieser auslöst
- Ruotare l'attrezzo fino allo slittamento
- Gire la herramienta hasta que sienta el embrague



View our How to Use Video at
www.norbar.com/HowToUseATorqueScrewdriver

www.norbar.com

Norbar Torque Tools Ltd
Wildmere Road, Banbury, OX16 3JU

Part No. 34405 Issue 2
© Norbar Torque Tools Ltd 2018