




Remove seal • Enlevez le scellé • Entfernen der sicherungskappe • Rimovere la tenuta • Retirar junta

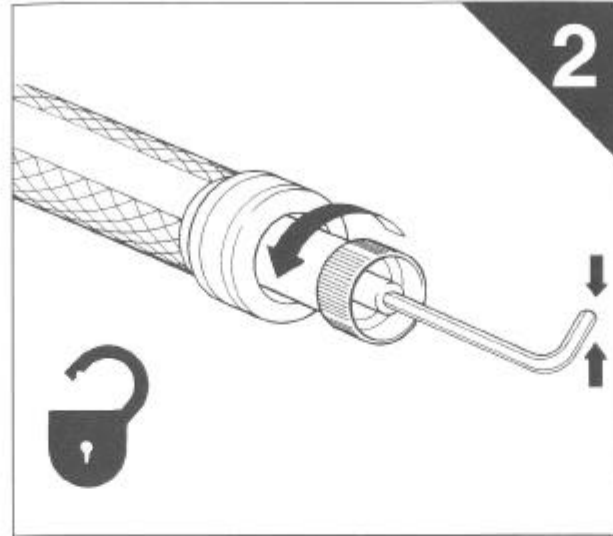


Unlock • Déverrouiller la mollette • Entsichern  
Sbloccare • Desbloquer

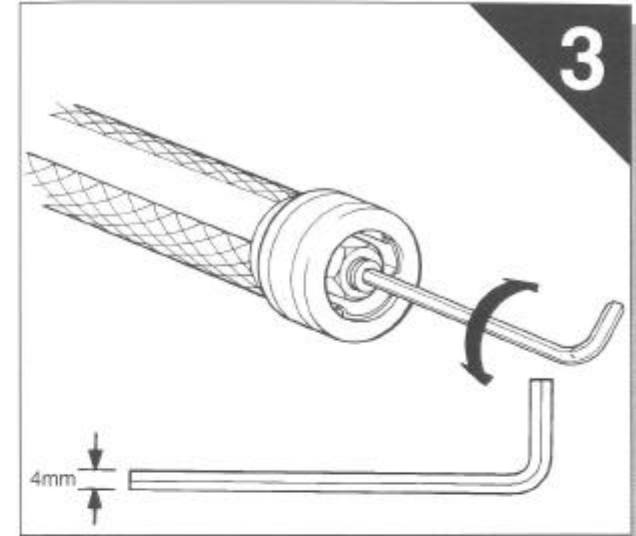


Adjust • Régler • Einstellen  
Regolare • Adjustar

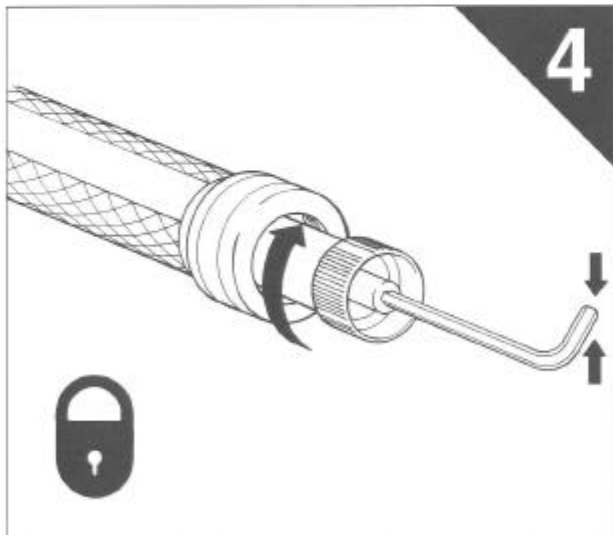

Lock • Verrouiller la molette • Sichern  
Bloccare • Bloquear

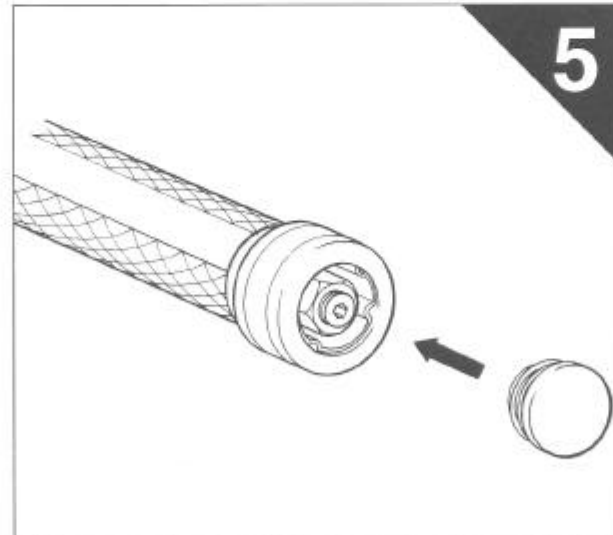

Fit new seal • Placez nouveau scellé • Einsetzen einer neuen sicherungskappe • Montare la nuova tenuta • Colocar la nueva junta

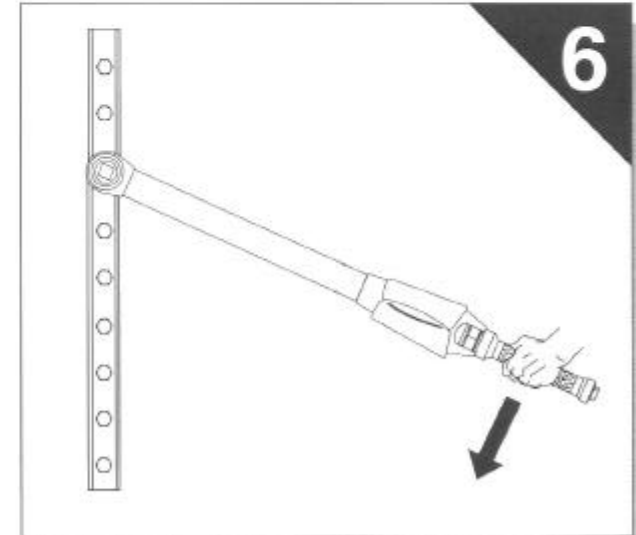

Apply Torque • Appliquer le couple • Drehmoment Anwendung  
Applicare la coppia • Aplicar el par apriete