OPERATOR'S MANUAL



((

EVOTORQUE® BATTERY CHARGER (CTC123 (60335))



	EN	English	Operator's Manual	Original Instructions Original Instructions
	DA	Dansk	Betjeningsvejledning	Oversættelse af oprindelige instruktioner
	NL	Nederlands	Handleiding	Vertaling Van De Originele Instructies
	FI	Suomi	Käyttäjän opas	Käännös a Ikuperäisistä ohjeista
	FR	Français	Manuel d'utilisation	Traduction des instructions originales
	DE	Deutsch	Bedienungsanleitung	Übersetzung der Originalanweisungen
	IT	Italiano	Manuale d'uso	Traduzione delle istruzioni generali
#	NO	Norsk	Manual for maskinoperatør	Oversettelse av de originale instruksjonene
	PL	Polski	Instrukcja obsługi	Tłumaczenie oryginalnej instrukcji
(B)	PT	Português	Manual do utilizador	Tradução das Instruções Originais
緣	ES	Español	Manual del operario	Traducción de las instrucciones originales
+	sv	Svenska	Bruksanvisning	Översättning av bruksanvisning i original

SAFETY MESSAGES

Norbar provides safety messages to cover reasonable situations that may be encountered when operating, servicing or repairing cordless tools. It is the responsibility of operators and servicing technicians to be knowledgeable about the procedures, tools and materials used, and to satisfy themselves that the procedures, tools and materials will not compromise their safety, that of others in the workplace or the tool.

Read these instructions carefully before using battery charger. Read all cautionary marking on battery, charger and all tools or products that use the batteries.

IMPORTANT SAFETY INSTRUCTIONS

DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

- This manual contains important safety and operating instructions for the Norbar (CTC123 (60335)) Charger.
- 2. Before using battery charger, read all instructions and cautionary markings on battery charger, battery and product using battery.
- CAUTION—To reduce risk of injury, charge only Norbar EBP series type rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
- 4. Do not expose charger to rain, moisture, or snow.
- 5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
- 6. To reduce risk of damage to cord, pull by the plug rather than the cord when disconnecting the charger.
- Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- 8. Do not operate the charger with damaged cord replace it immediately.
- 9. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified service person.

- Do not disassemble charger; take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- 11. To reduce risk of electric shock, unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
- 12. The appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 13. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 14. Do not recharge non-rechargeable batteries.
- 15. Never attempt to connect two chargers together.
- Have your charger serviced by a qualified repair person using only identical replacement parts.
 This will ensure that the safety of the charger is maintained.
- 17. For the location of the nearest Norbar repair centre, please call customer service +44 (0) 1295753600.
- To reduce risk of battery explosion, follow these instructions.
- 19. Never smoke or allow an open spark or flame in the vicinity of the battery or engine.
- 20. Never charge a frozen battery.
- 21. Do not operate charger in a closed-in area or restrict ventilation in any way.
- 22. Do not use an extension cord unless absolutely necessary. If an extension cord must be used, make sure that the:
 - Pins on the plug of the extension cord are the same number, size and shape of those of the plug on the charger,
 - Extension cord is properly wired and in good electrical condition, and
 - Wire size is large enough for AC ampere rating of charger as follows

Charger	Cord Length	Wire Size
100-120	25 feet / 50 feet / 100	18 AWG
Volt	feet	
220-240	50 meters	0.75 mm
Volt	75 meters	1.0 mm

Recommended Extension Cord Length

SAVE THESE INSTRUCTIONS

Safety Instructions for Battery

AWARNING



Risk of explosion or fire.

- Do not store the tool and battery in locations where the temperature may reach or exceed 49°C (120°F).
- CTC123 chargers will not charge battery when temperature is below 0°C (32°F) or above 45°C (113°F).
- Do not incinerate the battery, even if severely damaged or completely exhausted. The battery may explode in fire.
- Cover the battery pack terminals with heavy adhesive tape after removing the battery pack.
- Do not attempt to destroy or disassemble the battery pack or remove any of its components.
- Do not charge using an engine generator or DC power source.

Explosion or flames can cause injury.



Risk of electric shock.

- · Do not disassemble the battery.
- · Do not short circuit the battery.
- Charge battery pack only with the charger provided.
- Disconnect battery pack when not in use, before servicing and when changing accessories.
- Do not charge using an engine generator or DC power source.

Electric shock or fire can cause injury.



Risk of burn.

- Battery leakage may occur under conditions of extreme usage or temperature.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

Burns can cause injury.

Safety Rules for Battery Disposal





Risk of explosion or fire.

Do not throw away used batteries! Placing spent

Lithium-lon batteries into the general waste may be ILLEGAL.

Where possible contact *RBRC*[™] to dispose of the battery. The *RBRC*[™] seal on the Lithium-lon battery contained in this product indicates

that **Norbar** is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life.

Alternatively dispose of the battery following local regulations.

If in doubt contact a Norbar authorized repair centre for recycling information.

Explosion or flames can cause injury.



Risk of burn.

- Do not attempt to disassemble the battery or remove any component projecting from the battery terminals.
- Prior to recycling, protect exposed terminals with heavy insulating tape to prevent shorting.

Fire can cause injury.

FCC Regulations

This device complies with Part 15, Subpart B of the FCC Rules.




Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

SAVE THESE INSTRUCTIONS

FUNCTIONAL DESCRIPTION

A - LED display for each 14V and 18V pair

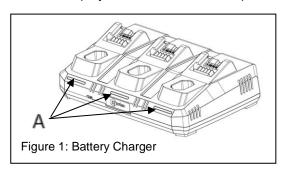

SPECIFICATIONS

Battery Charger Specifications (Norbar CTC123 (60335))

Input	_100-240VAC, 50/60Hz
Output	Battery 18V DC 5A Battery 7.2 / 14.4V DC 3A USB 5V DC 1A
Weight	_1.4 kg (3.0 lb)
Safety Standards	EN 60335-1 & EN 60335-2-29
EMF Standards	EN 62233
EMC Standards	EN 55014-1, EN 55014-2, EN 61000-3-2 & EN 61000-3-3
Charging Temperature	e Range0°C (32°F) to 45°C (113°F)

NOTE: If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Symbology

	V	=	CE	
Refer to Operator's Manual	Volts	Direct Current	CE MARK	Do not place in general waste

Battery Pack Specifications (Norbar EBP 60334)


Туре	_Lithium-Ion
Voltage	18 VDC (3.6V X 5 cells)
Weight	0.75 kg (1.65 lb)
Charge Time	70 min (approximately)
Life	_1,000 cycles (Note: 1 cycle = 1 charge and 1 discharge)
Capacity	5.0 A•H
Discharge Temperature Range 20°C (-4 60°C (14	

OPERATION

AC Cord and Plug Requirement

- 1. Cord rating
 - 120V, 10A, Type: SPT-2, 18AWG.
 - 240V, 2.5A, Type: H03VVH2-F, 2X0.75mm or equivalent.
- 2. Cord length: min.1.8m (6 feet); max. 6.1m (20 feet) including output cord.
- 3. Cord type: must comply with requirement set out by the safety approval / certification Organization of each country of use.

Battery Charging

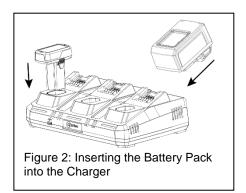

- 1. If charger is supplied with a separate charger cord, plug cord into charger.
- 2. Plug the other end of charger into the AC power source.
- Insert battery pack in charger. Press lightly on battery pack until it stops. The charger is equipped with a 4-LED fuel gauge that indicates 25%, 50%, 75% and 100% state of charge. When the battery makes contact, all 4 green LEDs on the fuel gauge of the charger will flash twice and then the charger will step through the

- 4 LEDs and stop at the one flashing green LED that signifies the battery state of charge and that the battery is charging. LED display for each 14V and 18V pair.
- 4. Certain built-in safety protections may lock the charger off. If no charger light illuminates, remove the battery and unplug the charger for 10 minutes. Plug the charger back in and insert a known good battery. If no light comes on the charger is faulty and must be replaced.
- 5. The charger will not charge if the battery pack is too hot or too cold. The charger will show a flashing yellow LED and wait until the battery temperature is between 0°C (32°F) and 45°C (113°F) to begin fast charging.
- 6. Standard fast charging time is 30 minutes. Charger may take longer than 30 minutes. The charge cycle may be longer if the battery has been left in a low state of charge for an extended period of time. When the charge is complete, all 4 green LED's stay illuminated.
- A flashing red LED indicates the battery is faulty and the charger will not charge. Remove the battery from the charger and replace the battery.
- 8. The charger has one USB port; its output current is 1 A and output voltage is 5 VDC. Do not connect to an appliance requiring over 1 A.

BATTERY PACK

Battery Pack Protection

To maximize performance and battery life, the Lithium-lon battery is protected by safety circuits in the tool and the charger. They monitor battery voltage, discharge/charge amperage and temperature.

Cold Weather Operation

The Lithium-Ion battery can be used in temperatures down to -20°C (-4°F). When the battery pack is very cold, run the tool at no load to warm the battery and then use the tool normally.

Hot Weather Operation

If the Lithium-Ion battery temperature reaches 45°C (113°F), the protection circuit will turn off the battery. Once the battery has cooled down, the charger will resume normal operation.

Storage

Do not expose your battery pack to water or rain; this could damage the battery pack.

Fully charge the battery before placing it in storage. For optimum life, store the Lithium-Ion batteries at

room temperature away from moisture. Permanent capacity loss can result if batteries are stored for a long period at high temperature.

MAINTENANCE

Service

Service of a charger requires extreme care and knowledge. Service should be performed only by a qualified service technician.

- Always check charger for damaged parts before use.
- Replace or repair damaged parts before use.
 Check broken parts, mounting, and any other conditions that may alter operation.
- Have damaged parts properly repaired or replaced by an Authorized Service Centre.
- Maintain chargers. Keep chargers dry, clean, and free of oil and grease for better and safer performance.
- For location of the nearest Norbar repair centre, call Norbar customer service at +44 (0) 1295 753600.
- When charging or discharging a Lithium-Ion battery over a short period of time, the internal temperature of the battery pack increases substantially. This is normal.
- Under ideal working conditions the useful life of a lithium ion battery pack is around 1000 charge/discharge cycles. Improper care and maintenance shortens battery life and the amount of time the battery holds a charge.
- Use only with Norbar charging equipment that specifies a EBP series battery pack.
- Avoid short circuiting the battery pack. Permanent damage to the pack can occur from high current discharge.



- Unplug charger from outlet before starting the disassembly procedure.
- Remove the battery pack from the tool before starting the disassembly procedure. Shortcircuiting the battery pack can cause fire or personal injury.
- Use safety equipment. Always wear eye protection.



NORBAR TORQUE TOOLS LTD

Wildmere Road, Banbury, Oxfordshire, OX16 3JU UNITED KINGDOM Tel + 44 (0)1295 753600 Email enquiry@norbar.com



NORBAR TORQUE TOOLS

45–47 Raglan Avenue, Edwardstown, SA 5039 AUSTRALIA Tel + 61 (0)8 8292 9777 Email enquiry@norbar.com.au



NORBAR TORQUE TOOLS INC

36400 Biltmore Place, Willoughby, Ohio, 44094 USA Tel + 1 866 667 2279 Email inquiry@norbar.us



NORBAR TORQUE TOOLS PTE LTD

194 Pandan Loop #07-20 Pantech Business Hub SINGAPORE 128383 Tel + 65 6841 1371 Email enquires@norbar.sg



NORBAR TORQUE TOOLS (SHANGHAI) LTD

91 Building- 7F, No. 1122, Qinzhou North Road, Xuhui District, Shanghai CHINA 201103 Tel + 86 21 6145 0368 Email sales@norbar.com.cn



NORBAR TORQUE TOOLS INDIA PVT. LTD

Plot No A-168, Khairne Industrial Area, Thane Belapur Road, Mahape, Navi Mumbai – 400 709 INDIA Tel + 91 22 2778 8480 Email enquiry@norbar.in

www.norbar.com